

## instructions for use

### PREMIUM DECOR RETRACTABLE SUN SAILS

- The sun sail is used to shade the specific place and should be used as intended.
- When the summer season ends, the sun sails need to be uninstalled, washed, dried and stored in a dry place (the fabric can be washed by hand or in a washing machine at 30°C without spinning and without using any aggressive detergents).



- The sun sails are made of Premium Decor 100% polyester textile with 200g/m<sup>2</sup> grammage, which is impregnated on its back side, so the fabric can also protect against light rain. Since the fabric has the front and the reverse side, it has to be mounted with the front side facing the sun.
- The material can discolour up to 8% per year.
- The sun sail is not a maintenance-free product. It cannot be exposed to strong wind and should be retracted or disassembled, especially when its surface is large.
- The sun sail must be inspected for damage regularly. A damaged sun sail cannot be used until it is repaired.
- It is unacceptable for any objects to be placed on the surface of the sun sail. They need to be removed immediately because they might fall down on a random place.
- The sun sail should be fitted in a place that allows it for drying up completely or being dried during use. Please remember that any residual water on the surface of sun sail is unacceptable. If there is no other option, water has to be removed manually.
- Retracting the sun sail is possible only with the ropes hung perfectly parallel to each other (+/-6mm).
- The sun sail is not stretched - the ropes are stretched and the fabric is hung freely over them (Fig. 1.b).
- It is recommended to install the sun sail in line with the diagram presented in Figure 2.



Figure 1a. Retracted sun sail with visible fixing to the structure.



Figure 1b. Retractable sun sail on 2 ropes



Rysunek 1c. Top of retractable sun sail on 3 ropes

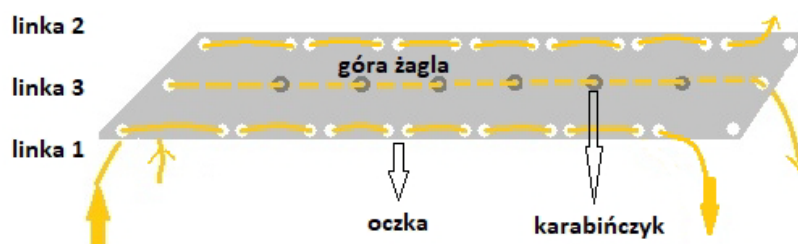


Figure 2. Proposed method of fitting the sun sail (the third rope is optional).



SCAN THE QR CODE and WATCH  
THE INSTRUCTIONAL VIDEO ON



**instructions for use**


**PREMIUM DECOR RETRACTABLE SUN SAILS**

**SUGGESTION FOR INSTALLATION:**

1. Unfold the sun sail flat with the front side facing up, under the place where it is to be installed.
2. Carefully measure the distance between the centre of individual eyelets to set the distances between the ropes.
3. Install the sun sail by interlacing the rope through the eyelets located on the retractable edges, starting from the single eyelet in the corner (Fig. 2.). Interlacing should start at the bottom of the eyelet and finish before the last eyelet.
4. Fix the ends of the rope on the structure in accordance with the instructional video.
5. Tighten the rope using the bottle screw, which is available with the installation kit, purchased separately.
6. Attach the last eyelets (the ones not interlaced) to the structure, e.g. using a snap ring, while masking the fastening and tensioning elements of the rope (Fig. 1.a).

Purchase the installation kit!

**sample installation kits include:**

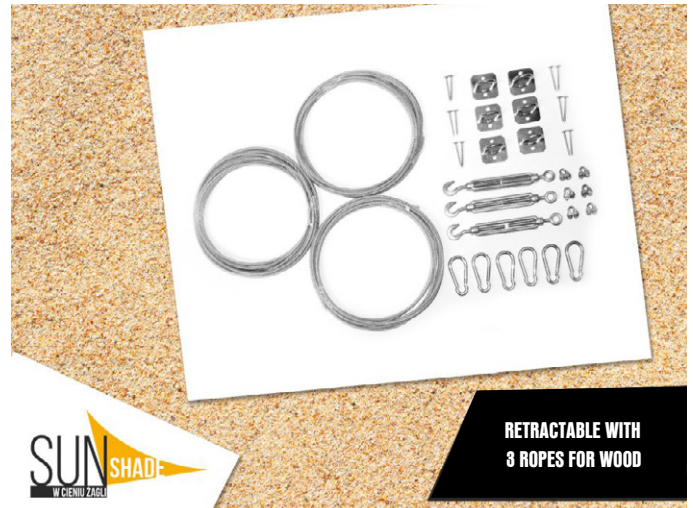

**WOOD KIT ON 2 ROPES**

- steel rope 4 sections x 2 m
- bottle screws for tensioning x 2 pcs
- steel rope clamps x 8 pcs
- sail snap rings x 10 pcs
- pad eye plates x 4 pcs
- screws for wood x 8 pcs

**WOOD KIT ON 3 ROPES**

- steel rope 3 sections x 2 m
- bottle screw for tensioning x 1 pcs
- steel rope clamps x 6 pcs
- sail snap ring x 8 pcs
- pad eye plates x 3 pcs
- screws for wood x 6 pcs

Haven't you found a proper set?  
Are you looking for a wall, metal or  
another fixing?  
Ask the advisor!



Quick contact phone: 518 537 385