

instructions for use
**MESHFLAG DRAPES/CURTAINS WITH
ONE SIDE PRINT**



Figure 1. Gazebo curtain

- The curtain should be fitted vertically. It is used to decorate the specific place, it also has shading, rainproof and windproof properties and should be used as intended.
- When the summer season ends, the curtain has to be uninstalled, washed, dried and stored in a dry place (the fabric can be washed by hand or in a washing machine at 30°C without spinning and without using any aggressive detergents)



- The curtains are made of a light and very durable snow-white standard curtain fabric with 100g/m² grammage.
- The material can discolour up to 8% per year.
- The curtains are not a maintenance-free product. They cannot be exposed to strong wind - they should be retracted and secured so that they do not catch too much wind, or they should be disassembled, especially when their surface is large.
- The curtain must be inspected for damage regularly. A damaged curtain cannot be used until it is repaired.
- The curtains should be fitted in a place that allows them for drying up completely or be dried during use.
- The upper rope should be mounted at the minimum height set in a way so as to prevent the head from catching on the rope. The bottom rope cannot be fitted to the curtain - if the place where it is to be installed is a place where it passes to the other side and there is a risk of tripping over the rope.
- The curtain is not stretched, the rope is stretched and the material is hung freely over it (Fig. 1).
- It is recommended to install the curtains in line with the diagram below.

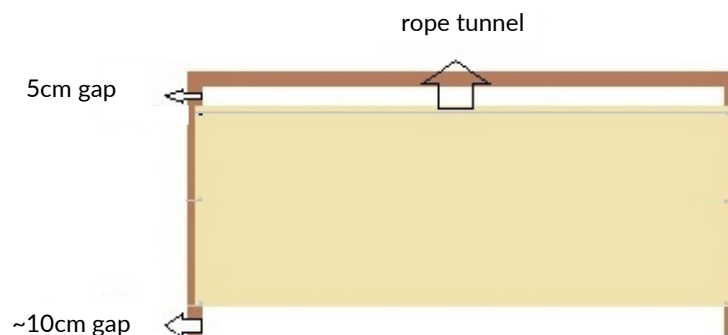


Figure 2. Proposed method of curtain installation (top finish with a tunnel and sides with eyelets).





instructions for use

MESHFLAG DRAPES/CURTAINS WITH ONE SIDE PRINT

SUGGESTION FOR INSTALLATION:

1. Unfold the curtain flat in the place where it is to be installed.
2. Specify the height at which the upper rope should be fitted - preferably approx. 5 cm under the upper beam of the structure to which it is attached (Fig. 2.)
3. Put the rope into the upper tunnel.
4. Fix the ends of the rope on the structure in accordance with the instructional video.
5. Tighten the rope using the bottle screw, which is available with the installation kit, purchased separately.
6. Fit the bottom corners of the curtain, and then use the eyelets on the side to attach/fix the curtain to the structure.
7. In order to mask the rope fastening and tensioning elements, slide the tunnel over the components.

Purchase the installation kit!

sample installation kits include:



FOR WOOD

- steel rope 2 sections x 6 m
- bottle screws for tensioning x 2 pcs
- steel rope clamps x 4 pcs
- sail snap ring x 4 pcs
- pad eye plates x 4 pcs
- screws for wood x 8 pcs

Haven't you found a proper set?
Are you looking for a wall, metal or
another fixing?
Ask the advisor!



Quick contact phone: 518 537 385